

Preparation:

1. The computer the scanner is attached to must be powered on. No particular program needs to be running to complete the configuration
2. Print this document (preferably using a laser printer)

 
Start here if you have a **USB Scanner** (Connects to the computer with a thin rectangular plug)



3a. Factory Defaults - Resets your scanner to default settings.



4a. USB Interface - Programs the scanner to work as a USB Keyboard



5a. Keyboard Emulation - Programs the scanner to work without an external keyboard.



 
6a. Carriage Return Suffix - Programs the scanner to add an Enter key signal after each scan.



Start here if you have a **PS2 Scanner** (Connects to the computer with a round plug and has a second plug to connect a keyboard to the computer **through** the scanner)



3b. Factory Defaults - Resets your scanner to default settings.



4b. Keyboard Emulation - Programs the scanner to work without an external keyboard.

ONLY USE if your keyboard plugs **DIRECTLY** into your computer.

DO NOT USE if your keyboard connects to the computer **THROUGH** your scanner.



5b. Carriage Return Suffix - Programs the scanner to add an Enter key signal after each scan.



6b. Restart the computer – You **must** restart your computer for these changes to take effect

This section is the same for both USB and PS2 Scanners.

7. Scan Modes (Optional)

Auto Trigger:

(for scanners with stands)

Hands free, LED always on, Scans continuously at full power.



Presentation Mode

(for scanners with stands)

Hands free, LED's are off until a bar code is presented.



Manual Trigger (for hand held scanners)

Pull the trigger to activate the scanner.



8. Test scanner programming – Scan this barcode into Notepad twice. If it writes TEST123 to Notepad on two separate lines, you have successfully configured your barcode scanner. If not, repeat steps 3-7, reboot the computer and try this step again. If it still doesn't work, call PLS and speak to Aaron.

